


## Ozonator Solenoid Instructions

### Ozonator Solenoid

The Ozonator Solenoid screen allows the user to toggle the ozonator on and off.

- In the Main Menu, choose Instrument Controls > **Ozonator Solenoid**.
- Press  to toggle and set the ozonator solenoid on or off.

```
OZONATOR SOLENOID:
CURRENTLY:          OFF
SET TO:             ON ?
                    ← TOGGLE VALUE
RANGE  AVG  DIAGS  ALARM
```

**NOTE:** 1. Make sure that the ozonator solenoid is set to ON.

2. Then exit the screen back to the Main Menu by pressing the Menu button and then the “run” button (looks like a forward triangle).