


Ship Sector Control System for Flux Analyzers

Wind Tracker alarms configured to be ON when wind is > 1 m/s and in-sector (+/- 120 deg from bow)

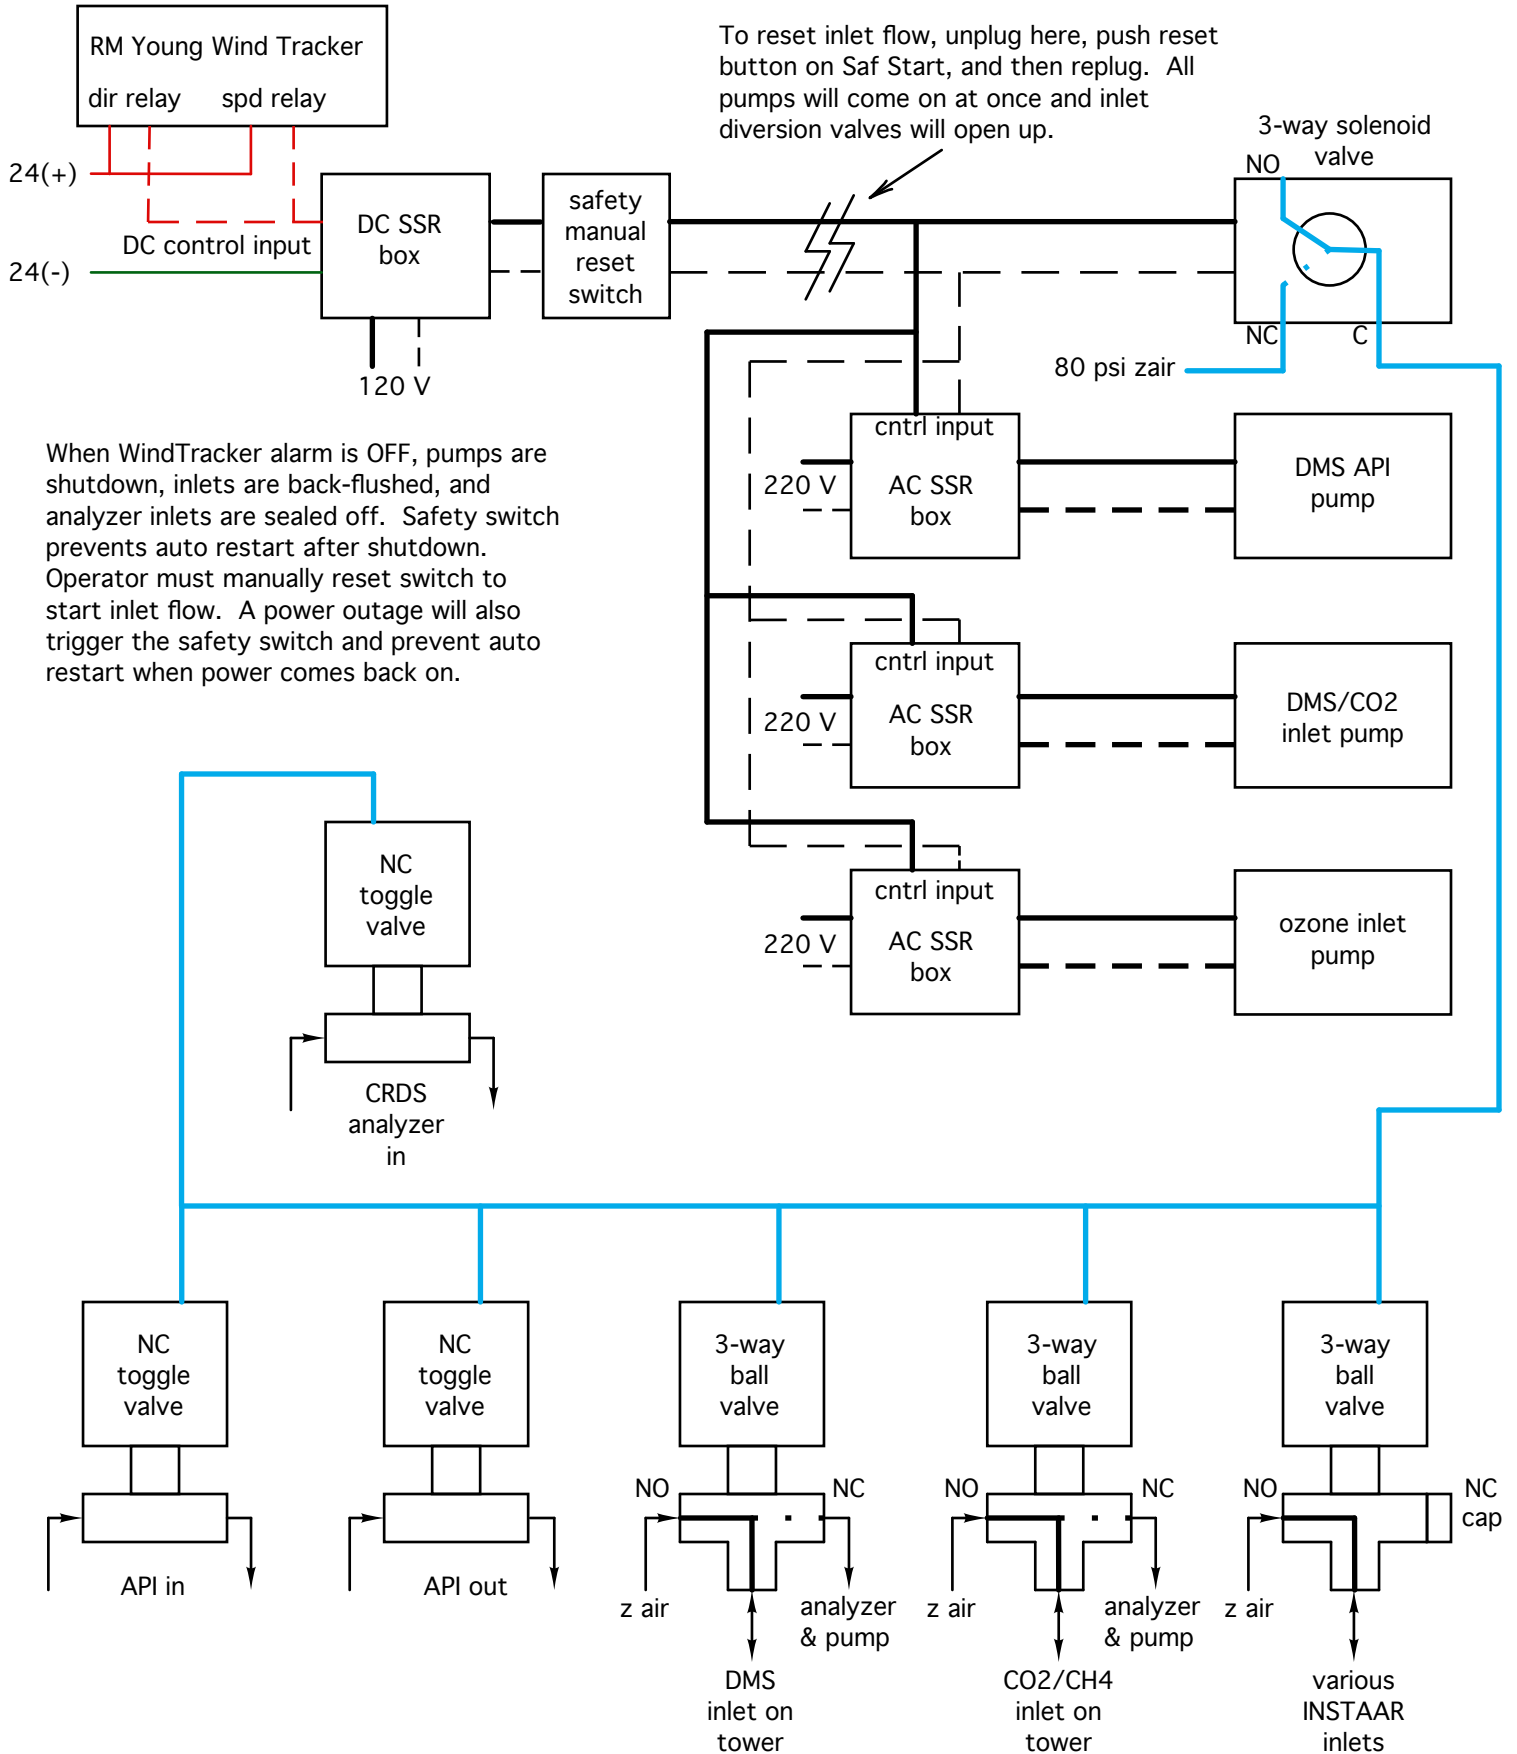

When WindTracker alarm is OFF, pumps are shutdown, inlets are back-flushed, and analyzer inlets are sealed off. Safety switch prevents auto restart after shutdown. Operator must manually reset switch to start inlet flow. A power outage will also trigger the safety switch and prevent auto restart when power comes back on.