


## Instructions to Attach the External Pump to the TEI 49i

- A. When the scrubber is up-side down (i.e. the labeling on the scrubber is upside-down) Connect the pump to the top of the scrubber, see Label A in photo below
- B. Connect the bottom scrubber port to the “Zero air” inlet on the back of the TEI 49i, see Label B in photo below
- C. All fittings should be tightened to where they will not leak.
- D. Plug the power cord for the pump into an electric outlet near the instrument.

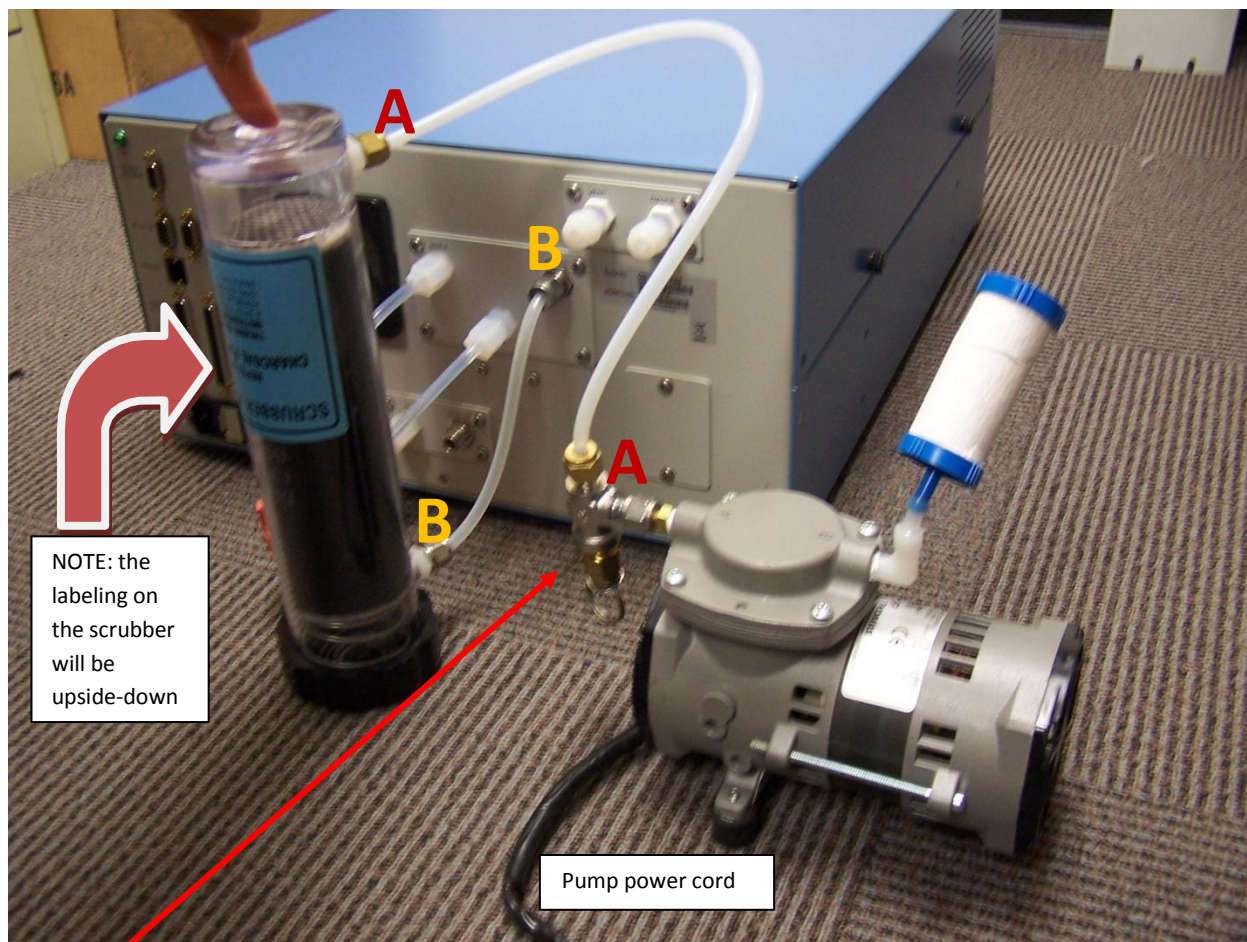

**NOTE:** Make sure that the connection to the external pump is connected as pictured above; Notice that the downward facing part of the “T” has a ring connected to it that is loosely attached to let excess pressure escape from the pump. IF these connections are not connected as pictured above, then remove and re-connect the tubing so that it IS connected as pictured above.